


Beveling Transmission

Motorized Kit - Model 206F

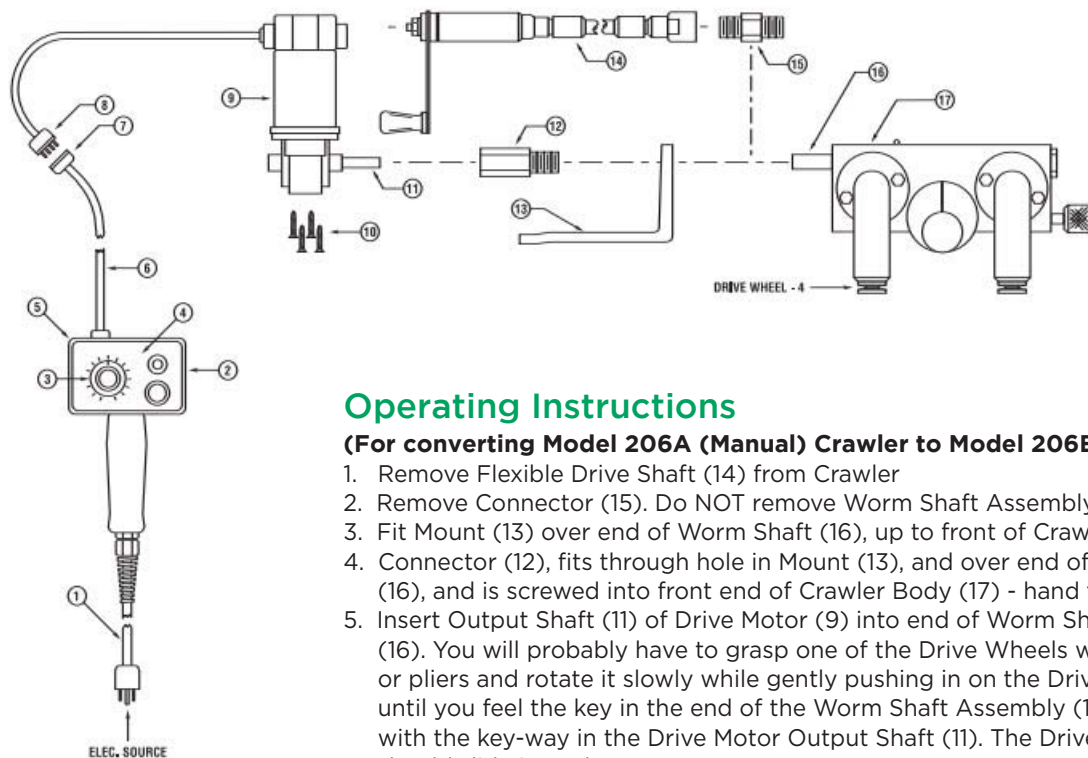

Operating Instructions

(For converting Model 206A (Manual) Crawler to Model 206B (electric)

1. Remove Flexible Drive Shaft (14) from Crawler
2. Remove Connector (15). Do NOT remove Worm Shaft Assembly (16)
3. Fit Mount (13) over end of Worm Shaft (16), up to front of Crawler Body (17)
4. Connector (12), fits through hole in Mount (13), and over end of Worm Shaft (16), and is screwed into front end of Crawler Body (17) - hand tight
5. Insert Output Shaft (11) of Drive Motor (9) into end of Worm Shaft Assembly (16). You will probably have to grasp one of the Drive Wheels with your hand or pliers and rotate it slowly while gently pushing in on the Drive Motor (9) until you feel the key in the end of the Worm Shaft Assembly (16) line up with the key-way in the Drive Motor Output Shaft (11). The Drive Motor should slide into place
6. Bolt Drive Motor to Mount (13)
7. Snug-up Connector (12)
8. Connect up electrics

No.	Part Name	Part No.	Qty.
1A	110V Power Cord (Shown)	525-1	1
1B	220V Power Cord	525-46	1
2	Yellow Box Shell	525-38	1
2A	110V Speed Control Box	4HK	1
2B	220V Speed Control Box	4HL	1
3	Knob	525-44	1
4A	110V Decal	55T-1	1
4B	220V Decal	55T-2	1
5	Magnet (Not Shown)	525-59	1
6	Extension Cord	525-46	1

No.	Part Name	Part No.	Qty.
7	Female Plug	4HM	1
8	Male Plug	4HN	1
9	Drive Motor	525-37	1
10	Screw	515-35	4
11	Output Shaft	114J-3A	1
12	Connector	114J-2	1
13	Mount	114S	1
14	Flexible Drive Shaft	29CA	1
15	Connector	93B-1	1
16	Worm Shaft Assembly	4DA	1
17	Crawler Body	206A	1



SAWYER MFG COMPANY

7799 S Regency Drive • Tulsa, OK 74131
 P (918) 834-2550 • F (918) 834-0318