

Specifications

Sawyer Crawler

Description	lb. Weight	kg. Weight
Standard Model 206A-9	21	9.5
Standard Model 206A-14	23	10.4
Standard Model 206B-110	17	7.7
Standard Model 206B-220	24	10.9
Standard Model 206B-90DC	18	8.2
Standard Model 206B-RA-9	22	10


Crawler Accessories

Description	lb. Weight	kg. Weight
Motorized Kit 110VAC (206F-110)	7	3.2
Motorized Kit 220VAC (206F-220)	7	3.2
Motorized Kit 90VDC (206F-90DC)	4	1.8
Dbl Cut Torch Holder (283D)	3	1.4
Adjustable Torch Holder (284D)	4	1.8

Sawyer Beveling Bands

Model No.	Size in.	Size mm.	lb. Weight	kg. Weight
206C	6	152.4	6	2.7
206C	8	203.2	8	3.6
206C	10	254.0	10	4.5
206D	12	304.8	12	5.4
206D	14	355.6	14	6.4
206D	16	406.4	16	7.3
206D	18	457.2	18	8.2
206D	20	508.0	20	9.1
206D	22	558.8	22	10.0
206D	24	609.6	24	10.9
206D	26	660.4	26	11.8
206D	28	711.2	28	12.7
206D	30	762.0	30	13.6
206D	32	812.8	32	14.5
206D	34	863.6	34	15.4
206D	36	914.4	36	16.3
206D	38	965.2	38	17.2
206D	40	1016.0	40	18.1
206D	42	1066.8	42	19.1
206D	44	1117.6	44	20.0
206D	46	1168.4	46	20.9
206D	48	1219.2	48	21.8
206D	50	1270.0	50	22.7
206D	52	1320.8	52	23.6
206D	54	1371.6	54	24.5
206D	56	1422.4	56	25.4
206D	58	1473.2	58	26.3
206D	60	1524.9	60	27.2

Operating Instructions

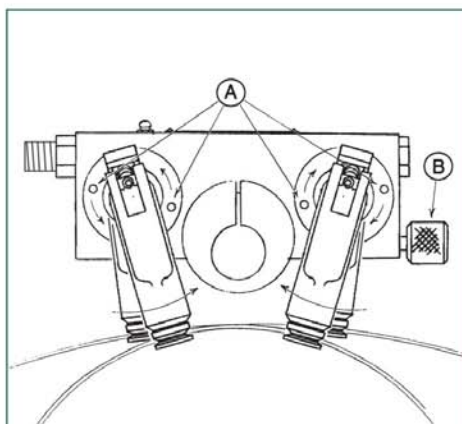

To adjust for Band radius --

1. Loosen cap screws "A" one or two turns.
2. Swing front and rear pairs of legs inward or outward to match band radius.
3. Snug up cap screws "A".
These should not be tightened down hard enough to interfere with the ball leg hinging action.

To adjust Torch Holder --

1. Loosen set screw "B".
2. Rotate eccentric torchholder to desired clearance.
3. Tighten set screw "B" -- hand tight.

Maintenance --

Occasionally use ice pick or pocketknife to scrape out accumulation in wheel grooves, to assure good crawler wheel/ band contact.



SAWYER MFG COMPANY

7799 S Regency Drive • Tulsa, OK 74131
P (918) 834-2550 • F (918) 834-0318