

Spacer Chart

200C Compact Beveling Machine

Machine No.	Pipe Size	Spacer
1	3 1/2	9
1	4 1/2	8
1	6 1/2	2
1	8 1/2	7
2	8 5/8	12
2	10 3/4	11
2	12 3/4	10
2	14	7
3	14	6
3	16	4
3	18	2
3	20	7
4	20	6
4	22	4
4	24	2
4	26	7
5	26	5
5	28	3
5	30	1
5	31	7

Machine No.	Pipe Size	Spacer
6	30	6
6	32	4
6	34	2
6	36	7
7	36	12
7	38	11
7	40	10
7	42	7
8	42	6
8	44	4
8	46	2
8	48	7
9	50	6
9	52	4
9	54	2
9	56	7
10	54	5
10	56	3
10	58	1
10	60	7

